

## SAUTE-VENT HYPERSPORT ERMAX

ADAPTABLE SUR CF MOTO 700 CL X SPORT 2022 → ∞

Durée estimée de montage : 15 min  
Niveau de difficulté : 1

### Outils

Clé Allen 3, Clé à cliquet, douille 10



### Démontage

Démonter le cache arrière du compteur à l'aide de la clé à cliquet et de la douille de 10 (2 écrous).


Réf	Désignation	Qté
1	Saute-vent ERMAX	1
2	Insert caoutchouc M5 Large	4
3	Vis BHc M5 x 25 Alu noir	4
4	Rondelle Plastique noir Ø5	4
5	Patte de fixation	1

### Montage

Monter la patte de fixation sur les 2 goujons de fixation du cache arrière du compteur et la fixer avec les 2 écrous démontés précédemment.

Mettre en place les 4 inserts caoutchouc sur la patte de fixation.

Fixer le saute-vent sur les inserts à l'aide des 4 vis et rondelles fournies.

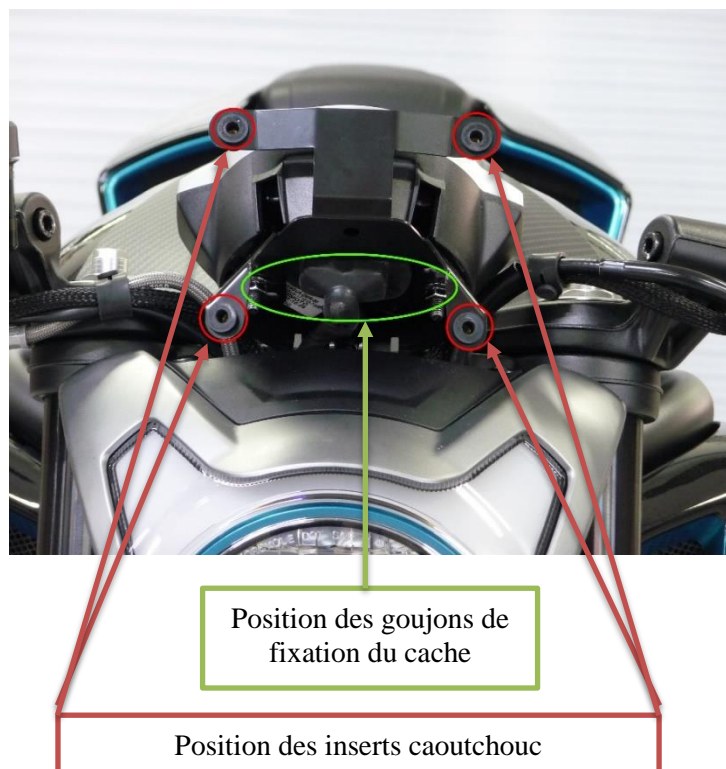

### AVERTISSEMENT

\* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.

\* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.

\* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.

\* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax

\* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

\* Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essayer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires

1074, Avenue des Carrières – Z.A la Plaine du Caire III  
 13830 ROQUEFORT LA BEDOULE – FRANCE  
 www.ermamax.com - E-Mail : accueil@ermamax.fr

## ERMAX HYPERSPORT NOSE SCREEN ADAPTABLE ON CF MOTO 700 CL X SPORT 2022 → ∞

Estimated assembly time : 15 min  
 Difficulty level: 1

### Tools

Allen wrench 3, Ratchet, socket 10



### Disassembly

Remove the rear cover of the speedometer using the ratchet and the size 10 socket (2 nuts).


Ref	Designation	Qty
1	ERMAX nose screen	1
2	Rubber insert wide M5	4
3	Screw BHc M5 x 25 Alu black	4
4	Black plastic washer Ø5	4
5	Fixing bracket	1

### Assembly

Mount the fixing bracket on the 2 mounting studs of the back cover of the speedometer and secure it with the 2 nuts previously removed.

Position the 4 rubber inserts on the fixing bracket.

Fix the windscreen on the inserts using the 4 screws and washers provided.

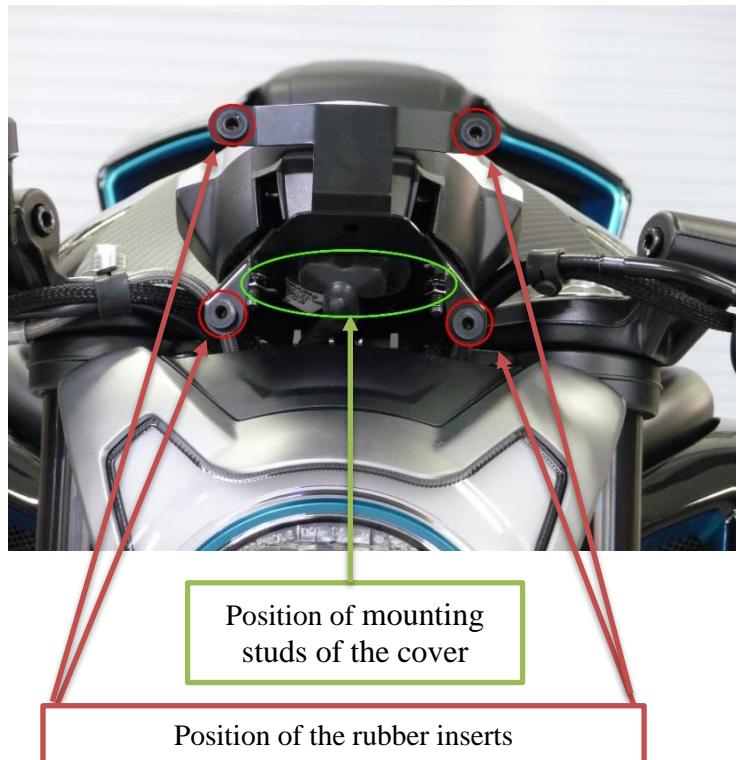

### WARNING

- \* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- \* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- \* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustings to fit.
- \* The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- \* Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- \* Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.