

KAWASAKI Z500 '24-

M O U N T I N G I N S T R U C T I O N S

REF 22190

DOWNFORCE NAKED FRONTAL SPOILER



1 Person



10 min








EASY

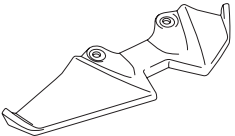

ALLEN
Nº 3
Nº 4




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Alerón Frontal Naked	Naked Frontal spoiler	1	22190J/N/CM3
2		Casquillo con valona Ø15x Ø9 x7,5	Ø15x Ø9 x7,5 Bush with flange	2	CASQUI-1A---324
3		Silentblock Ø18x Ø9 xØ11 x7,5	Ø18x Ø9 xØ11 x7,5 silentblock	2	SILENBGONE--064
4		Tornillo M5x25 Ø11 ISO 7380	M5x25 Ø11 ISO 7380 screw	2	TORNI-17380-766
5		Espuma adhesiva protectora 10x15mm	10x15mm adhesive protection foam	2	ESPUMA-----264

KAWASAKI Z500 '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

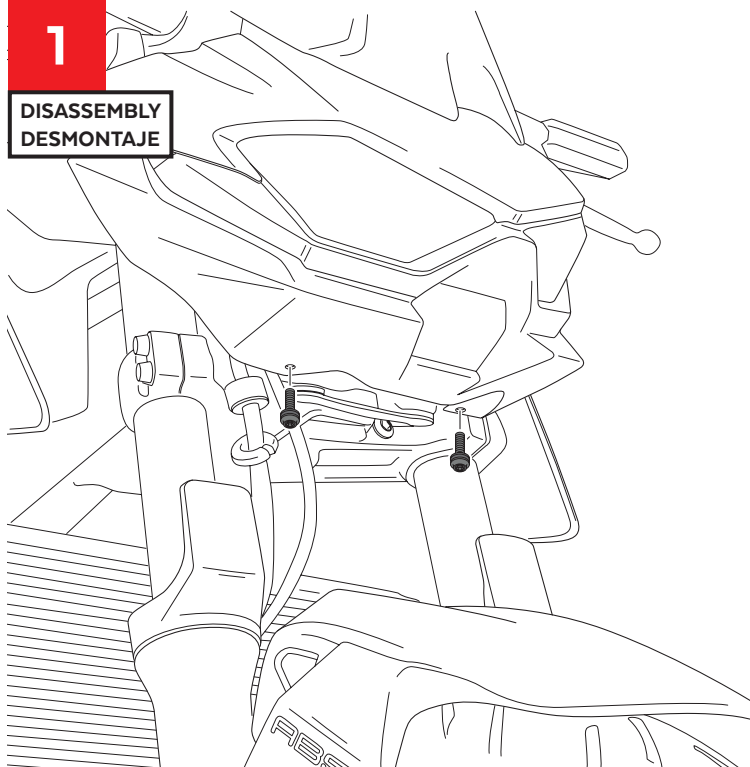

2

ASSEMBLY
MONTAJE

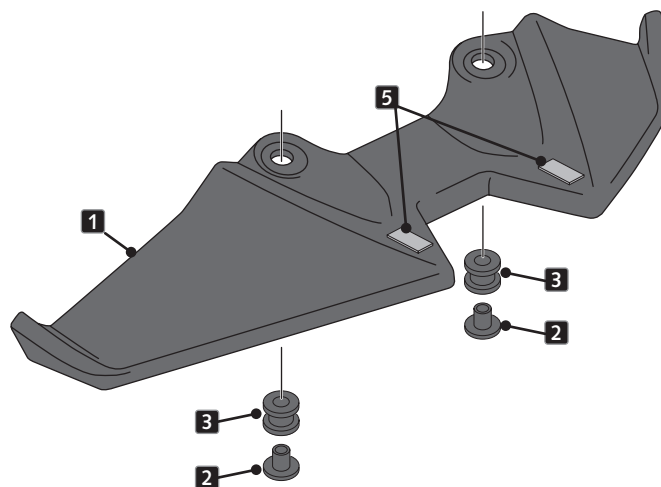

3

ASSEMBLY
MONTAJE

