


SYM JET X 125 (2021)

3405/E-X att. 3407/E



Brackets RH/LH	1+1
Well nut	4
Bolt M5	4
Plastic washer	4
Spacer ϕ 6.5	4
Bolt M10x40	2
Spring washer	4
Mirror bracket	2
Bushing 14x23	2
Nut left thread	2

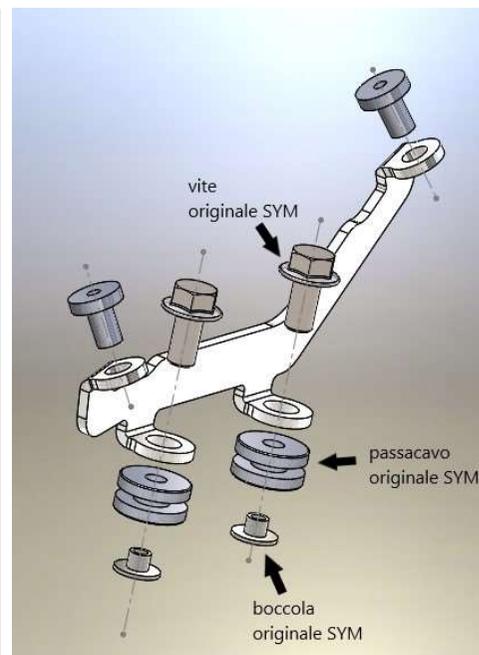

- 1) Take off the original screen.
- 2) Use original bushing, cable grommet and bolt to fix the provided brackets; beside RH brackets (fixing holes are faced inwards)
- 3) Add the well-nut in their room
- 4) Tighten the hardware to secure the bracket to the vehicle

Windscreen fixation

Insert one provided ϕ 6.5 spacer in every windscreen hole
Fix the screen by bolt M5 and plastic washer.



Fitting rear view mirror (Left side)

Fix the bracket on the handle original support by bolt M10x40, ϕ 10 spring washer and bushing 14x23.
Fix the mirror on the bracket by ϕ 10 spring washer and M10 left thread nut.