

NOTICE DE MONTAGE

SAUTE-VENT ERMAX ADAPTABLE SUR YAMAHA MT 125 2014/2019 Durée estimée de montage : 25 mn

Kit de fixation


- 4 vis acier BHC 4x25
- 4 inserts caoutchouc Ø4
- 4 rondelles plastique Ø4
- 4 entretoises plastique Ø6x10
- 2 butées caoutchouc autocollantes

Montage

- Démontez le cache compteur.
- Enlever les 4 agrafes filetées et repercer les trous d'origine en Ø8 (voir photo ci-dessous). **ATTENTION QUE LA MECHE NE S'ENGAGE PAS ET NE VIENNE PAS ABIMER LE COMPTEUR.**



- Mettre les 4 inserts Ø4 dans les trous reperçés en Ø8.
- Monter le saute-vent sans le serrer, en intercalant les entretoises entre celui-ci et les inserts Ø4. Vérifier le centrage du saute-vent, puis serrer les 4 vis.
- Mettre les 2 butées caoutchouc entre le saute vent et le cache pour éviter les vibrations.

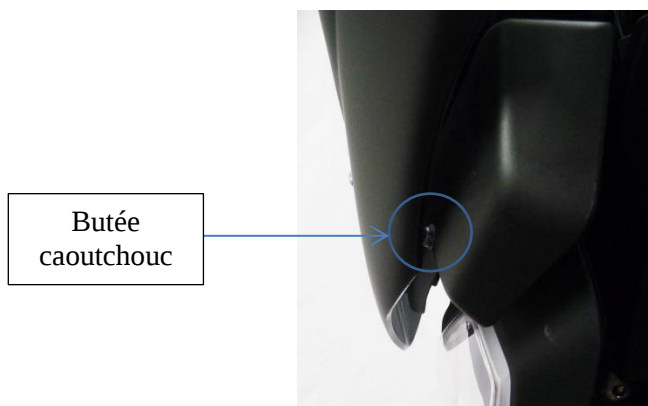

« ATTENTION »

* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.

* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.

* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.

* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.

* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

* Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essuyer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires.

FITTING INSTRUCTIONS

NOSE SCREEN ERMAX ADAPTABLE ON YAMAHA MT 125 2014/2019 *Estimated fitting time : 25 mn*

Fitting kit


- 4 steel screws BHC 4x25
- 4 plastic washers Ø4
- 2 adhesive rubber bumpers
- 4 rubber inserts Ø4
- 4 plastic spacers Ø6x10

Fitting instructions

- Remove the meter cover.
- Remove the 4 threaded fasteners and enlarge the original holes in Ø8 (see pictures below). **PAY ATTENTION THE DRILL DOES NOT ENTER TOO FAR AND DOES NOT DAMAGE THE METER.**



- Place the 4 inserts Ø4 into holes enlarged in Ø8.
- Fit the nose screen without tightening, by inserting spacers between the nose screen and inserts Ø4. Control the nose screen is well center and then tighten the 4 screws.
- Place both rubber bumpers between the nose screen and the cover to avoid vibrations.

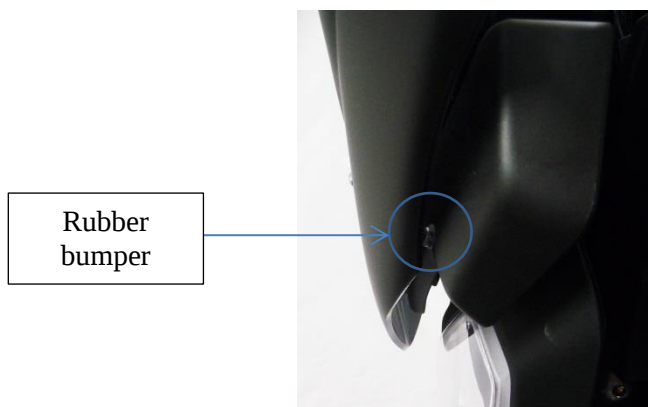

« CAUTION »

- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustings to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- * Screens damaged by an **inadequat washing** are not guaranteed (abrasive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.