

## HONDA PCX 125 (2021)

3430/EX att. 3432/E



Wellnut low head	4	1
Plastic washer with collar	6	2
Bolt M5x25	6	3
Washer ø18 thick 3mm	2	4
Washer ø18 th.1,5mm	2	5
Hexagon head bolt M6x16	2	6
Wellnut high head	2	7
Plastic washer 16x10 thick.1	6	8
Support RH/LH	1+1	9

Gen-X® è un marchio registrato



F.FABBRi ACCESSORI s.r.l.  
Via del Mangano 9 - 40023 Castel Guelfo di Bologna (BO) - ITALY  
Tel. +39 0542 670236 - +39 0542 670201  
www.fabbriaccessori.com - e-mail: info@fabbriaccessori.com



Remove the front molding by unscrew the two self-tapping screws located under the tip of the original windshield.

Then push the plastic down very carefully to free and remove the original screen.

NB. CARRY OUT THESE DELICATE OPERATIONS AT A WORKSHOP IS SUGGESTED; RISK OF BREAKING OF THE JOINTS.



1) At point "A" insert the washer 4 and at point "B" insert the threaded rubber 1

2) fasten (without tightening) the plate using the ø18 washer and the M6x16 hexagonal head screw for the "A" position, while for the "B" position use the plastic washer and the M5x25 hexagon socket screw

3) fix the holder, insert in then mount the front molding and fix it with the two original self-tapping screws.

4) finally, add the thin plastic washers n°8 behind wellnuts and plate; then fix the windshield using the provided black plastic washers and M5x25 screws

**ATTN: Point "C" is not used**

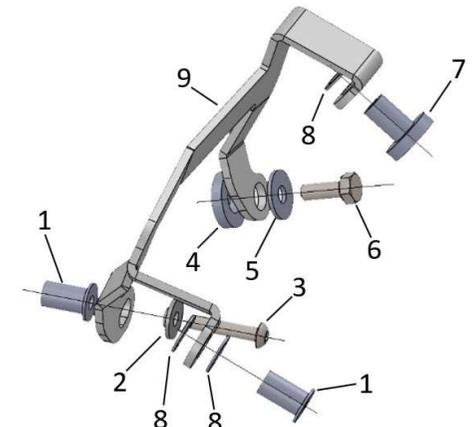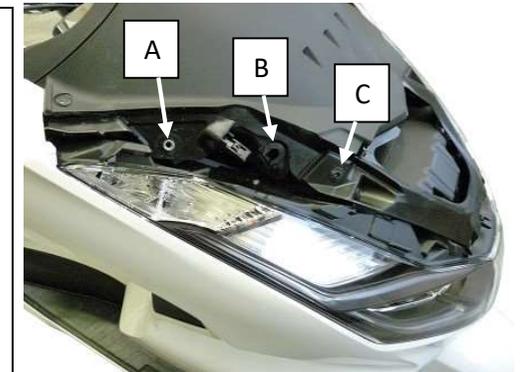

THE FIGURES REPRESENT THE LEFT SIDE OF THE ASSEMBLY;  
RIGHT SIDE IS SPECULAR