

FITTING INSTRUCTIONS

ERMAX NOSE SCREEN ADAPTABLE ON BMW G 310 R 2017 → ∞ Estimated mounting time: 20mn

Fitting kit


- 2 fitting brackets
- 2 steel spacers Ø8 L5mm
- 4 steel washers Ø8 type
- 4 plastic spacers Ø5
- 1 anti-reflective sticker
- 4 steel spacers Ø8 L10mm
- 4 screws BHc 8×40
- 4 screws BHc 5×20 (big head)
- 4 rubber inserts M5 wide flange - thickness : 5mm

Fitting instructions

- Place the brackets on the bike as shown on the picture (the final tightening will be done in the last step):

- : Spacers Ø8 L 10mm location
- : Spacers Ø8 L10mm + Ø8 L5mm location

- The fitting brackets are screwed with the screws 8×40 and the steel washers Ø8.

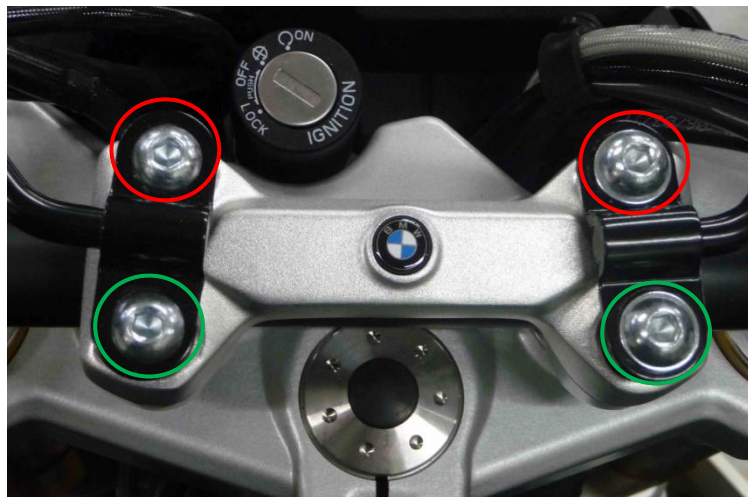

- Place the anti-reflective sticker to avoid reflections in the nose screen.

- Place the rubber inserts on the fitting brackets. Then thanks to the screws 5×20 and the plastic washers, fit the windshield on the brackets.

- : Threaded rubber inserts location



- Control the correct centering of the windshield and tighten the fitting brackets.

« CAUTION »

- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- * Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.